

iPolar Installation – CEM25/ZEQ25 (#3339-025)




iPolar electronic polar scope **#3339-025** is designed for ZEQ25/CEM25 mount. It can be installed in front of the mount to keep the optical polar scope in place (front mounting), or at the back to replace the optical polar scope (internal/rear mounting.)

Front Mounting


1. Remove front polar axis cover



2. Insert iPolar mount adapter into the RA axle opening. Tighten the hex screw to extend the stainless steel adapter to secure it inside the RA axle.

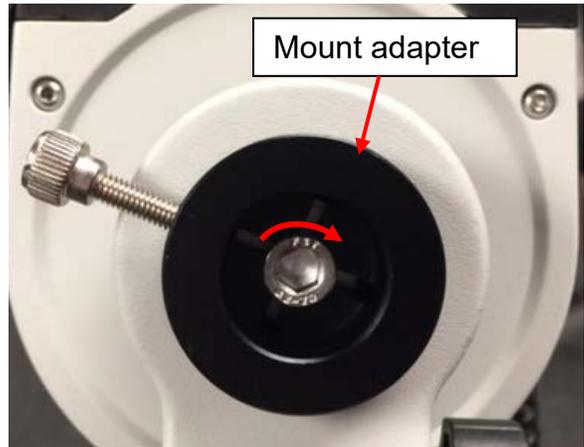

3. Install camera adapter. Finger tighten the locking screw on the mount adapter to secure it.

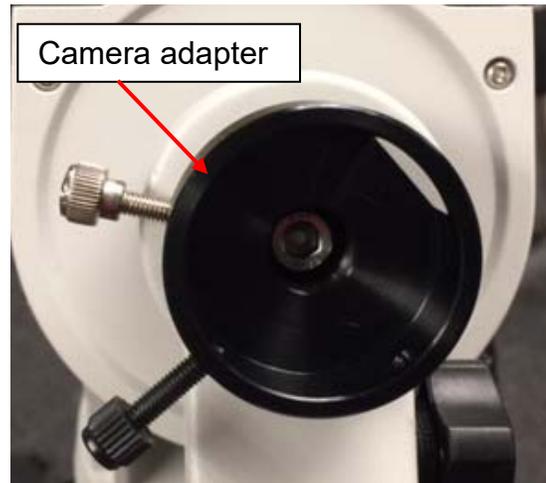

4. Insert the iPolar into the camera adapter. Adjust the USB port position and lock the iPolar. You may rotate the camera adapter to face the USB port to a desired position.



Internal/Rear Mounting

5. Remove DEC axle Cover.



8. Insert the iPolar into the RA axis. Lock the set screw gently to secure the iPolar.

6. Unthread the illuminating LED with the washer



7. Loosen the set screw that holds the polar scope and remove it from RA axle.