


Stepper Motor + adapter installation guide

Step 1

Remove focuser's single knob (please avoid to disassemble 1:10 knob)

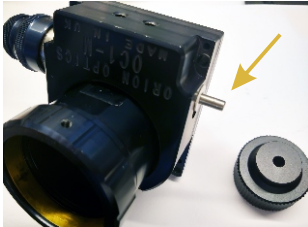


Step 2

Use a Philips head screwdriver to adjust motor up or down




Step 3

Adjust the three allen screws on the coupler to fit to your focuser's shaft.

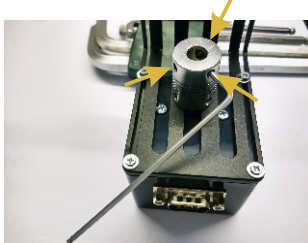

Step 4

Add motor to focuser and join the coupler with shaft.

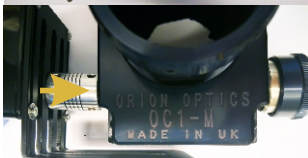


Step 5

Use the Philips head screwdriver to tight all screws




Step 6

Use a compatible screw and a spacer (included) or use your locking thumbscrew to attach the motor on your focuser.

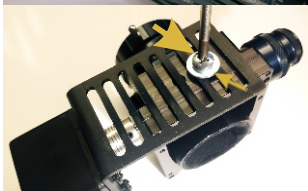


Step 7

Keep motor adapter parallel with the focuser

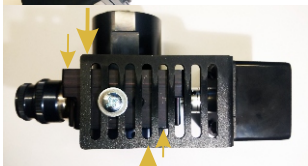


Step 8

Finally equally tight all three allen wormscrews

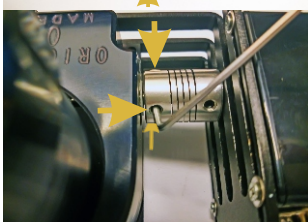

Alternatively use a longer dovetail and grab the bracket on it.

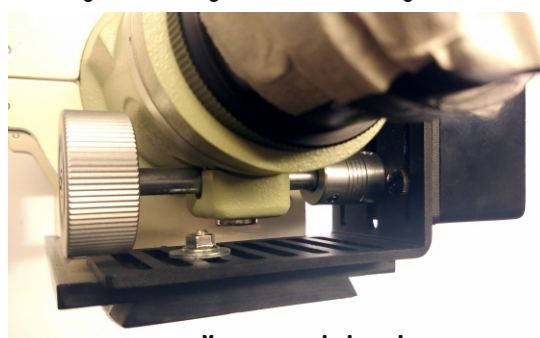

You are ready to go!